



MAINTENANCE GUIDE

PHILIPS

Saeco, a Philips brand

INDEX

Introduction	3
Our product experts are here to help	5
Register at My Philips	7
Descaling	9
Clean your brew group	13
Lubricate your brew group	15
Clean the coffee funnel	17
Clean the milk carafe	19
Clean the milk frother	21
Maintenance products	23



EXCELLENCE COFFEE AT-HOME

congratulations

TO YOUR AT-HOME
COFFEE EXPERIENCE

Thank you for choosing Saeco!

This booklet recommends routines that will keep your machine in top condition to provide you with delicious tasting aromatic coffee every time. Regular maintenance also prolongs the life of the machine.

We suggest that you keep this booklet, together with the user manual, close to your espresso machine so it is always at hand when you need it as a guide to perform maintenance.



Saeco



OUR PRODUCT EXPERTS ARE HERE TO HELP

Please contact us directly if you experience any problems or have questions regarding the use and maintenance of your espresso machine.

Our support is open:

mon-fri 09:00-18:00

Email or chat with us via

www.saeco.com/support

SWEDEN:

Call us on **08 579 290 67**

Chat 09:00-21:00

DENMARK:

Call us on **35 44 41 30**

NORWAY:

Call us on **22 97 19 50**

FINLAND:

Call us on **09 88 62 50 41**



If you prefer to see an instruction movie or get step by step instructions online go to
saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



REGISTER YOUR PRODUCT AT MY PHILIPS

Go to www.philips.com/welcome and register your product at My Philips today!

WHY REGISTER AT MY PHILIPS?

Get quick access to everything you need to know about your product.



Read more about the product



Manuals and Documents



Get support



Chat now



Write Review



Frequently asked questions about the product



Spare parts and accessories



CAPPUCCINO

AROMA
STRENGTH

MENU /
SPECIAL DRINKS

Saeco
PicoBaristo

DESCALE YOUR ESPRESSO MACHINE REGULARLY

WHY SHOULD I DESCALE?

Over time, your espresso machine will start to build up calc or limescale – this happens in all electrical appliances that use water.

SET THE WATER HARDNESS

Your machine is supplied with a standard water hardness setting suitable for most types of water. Since the hardness of the water differs between regions, you can do a water test to be able to set your espresso machine to the right water hardness.

I HAVE AN AQUA CLEAN FILTER, DO I STILL NEED TO DESCALE?

Yes, but less frequently than when not using the AquaClean filter.

You have to descale after approximately 5000 espresso cups of 50 ml and changing the filter at machine request.





YOUR MACHINE WILL LET YOU KNOW WHEN IT'S TIME TO DESCALE

HOW DO I KNOW WHEN IT IS TIME TO DESCALE?

Your machine will inform you when it is time to descale. How often you need to descale depends on how frequently you use the machine and also what type of coffee drinks you usually make.

Look in the user manual to find out how your espresso machine's descale signal looks like.

HOW DO I DESCALE?

- You need Saeco descaling solution CA6700 or CA6701.
- The process takes approximately 30-45 minutes and includes one cleaning cycle with the descaling solution and one rinse cycle with fresh water.
- Please see your user manual for step by step instructions.



If you prefer to see an instruction movie or get step by step instructions online go to
saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



CLEAN YOUR BREW GROUP

The brew group is the heart of the machine. Clean and grease it to make sure it runs like clockwork.

By regularly cleaning and lubricating your machine's brew group, you prevent coffee residues clogging up the circuits and keep mechanical parts moving smoothly.



EVERY WEEK

- Remove the brew group and rinse it with lukewarm water.
- Allow the brew group to air-dry before putting it back in the machine.

EVERY MONTH

Prevent clogged up circuits by removing oil from the brew group.

- Remove oil from the brew group by using the degreasing tablet CA6704.
- Place the degreasing tablet in the pre-ground coffee compartment.
- Follow step by step instructions in your user manual to finish the complete process.



If you prefer to see an instruction movie or get step by step instructions online go to saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



LUBRICATE YOUR BREW GROUP

To ensure that the mechanical parts will continue to move smoothly, lubricate your brew group regularly.

WHICH LUBRICANT SHOULD I USE?



Use Saeco grease HD5061.

HOW OFTEN SHOULD I LUBRICATE THE BREW GROUP?

- If you brew 1-5 cups per day, lubricate every 4 months.
- If you brew 6-10 cups per day, lubricate every 2 months.
- If you brew more than 10 cups per day, lubricate once a month.

WHICH PARTS OF THE BREW GROUP SHOULD I LUBRICATE?

1. Switch off the machine and unplug it.
2. Remove the brew group and rinse it under lukewarm water and let it air-dry.
3. Apply a thin layer of grease around the shaft in the bottom of the brew group.
4. Apply a thin layer of grease to the rails on both sides.

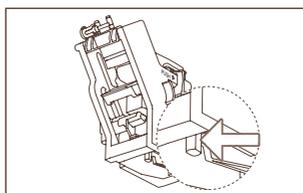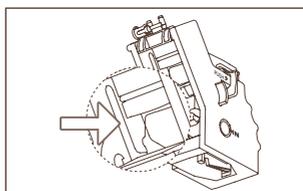

If you prefer to see an instruction movie or get step by step instructions online go to saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



CLEAN THE COFFEE FUNNEL

Clean the coffee funnel to make sure the ground coffee runs smoothly through the machine.


Coffee residue can block the coffee funnel inside the machine. Clean it weekly to prevent the coffee funnel from getting clogged.

WHY CLEAN THE COFFEE FUNNEL?


If the funnel is blocked, none or very little ground coffee will reach the brew group resulting in watery coffee or no coffee dispensing.

HOW DO I CLEAN THE COFFEE FUNNEL?

1. Remove the brew group from the machine.
2. Open the lid of the pre-ground coffee funnel. (Picture A) Note: If there is no pre-ground coffee funnel, insert the spoon handle into the coffee funnel from below (Picture B).
3. Place the spoon handle into the funnel.
4. Move the handle up and down until the clogged ground coffee falls down.
Note: Some force may be required, since clogged ground coffee can form quite a hard cake inside the funnel.

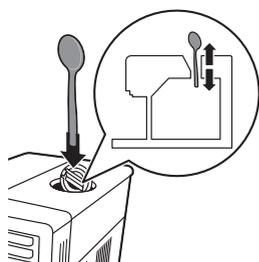

Picture A

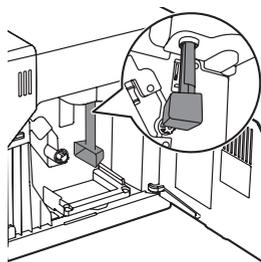

Picture B



If you prefer to see an instruction movie or get step by step instructions online go to
saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



CLEAN THE MILK CARAFE

Clean the milk carafe to ensure hygienic and frothy milk foam.

AFTER EVERY USE

- Perform a quick clean of the milk system after brewing a milk based beverage.

EVERY DAY

- Remove the top of the milk carafe and disassemble it. Rinse the parts thoroughly with lukewarm water.

EVERY WEEK

- Clean the milk circuits by filling up the milk carafe with water and put an empty cup under the dispenser and push the button for frothing milk.
- Disassemble and clean all parts of the milk carafe in lukewarm water.

EVERY MONTH

- Prevent clogged up milk circuits by using the Saeco milk circuit cleaner CA6705.
- Follow the step by step instructions in the user manual.



If you prefer to see an instruction movie or get step by step instructions online go to
saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



CLEAN THE MILK FROTHER

Clean the milk frother on machines without milk carafe.

AUTOMATIC MILK FROTHER EVERY DAY

Clean the milk circuits by placing the milk tube into a jug filled with fresh water, put an empty cup under the dispenser and press the milk froth button. Stop dispensing when clear water is coming through.



EVERY WEEK

- Remove the automatic milk frother from the hot water/steam dispensing spout
- Disassemble the milk frother and rinse the parts in lukewarm water.

CLASSIC MILK FROTHER EVERY DAY

- Remove the external part of the classic milk frother and rinse it with lukewarm water.



If you prefer to see an instruction movie or get step by step instructions online go to
saeco.se/espresso saeco.dk/espresso saeco.no/espresso saeco.fi/espresso



Descaling
CA6700 or CA6701



Aqua clean filter
CA6903



Maintenance kit
CA6706 or CA6707

PRODUCTS FOR TAKING CARE OF YOUR ESPRESSO MACHINE

To clean, grease and descale, we always recommend using SAECO maintenance products.

They are specifically developed for your espresso coffee machine and ensure that the taste and quality are never compromised.

Use the code* **espresso** to get **30% OFF** your first purchase of maintenance products in Philips webshop: www.philips.com/shop

**The code is valid for one purchase of maintenance products until December 2017. Only in Sweden, Denmark and Finland.*



Intenza water filter
CA6702



Milk circuit cleaner
CA6705



Coffee oil remover
CA6704



Brew group grease
HD5061

Philips Saeco S.p.A.

Via della Torretta 230-240 | 40041 Gaggio Montano | Bologna - Italy

Tel.: +39 (0) 534 77 11 11 | Fax: +39 (0) 534 31 025 | www.philips.com

In accordance with its policy of progressive product design Saeco International Group reserves the right to alter specifications. All specifications correct at time of going to print.

Saeco is a trademark of Royal Philips

PHILIPS